


Clamp Mounting Instructions

Part #	Hole Spacing
UCL - 40.2	5 1/2"
UCL - 40.3	5 1/4"
UCL - 40.9	5 1/8"

1) Drill two 3/8" dia holes in the mounting surface using spacing listed above. This spacing is from center to center of the holes and is very important in order to apply proper clamping pressure. Example: UCL - 40.2, 5 1/2" spacing




- 2) Place clamp over the housing, insert cushion spacer between the housing and mounting surface.
- 3) Install 3/8" dia bolts flatwashers and locking nuts.
- 4) Tighten enough to secure housing being careful not to over tighten.

WARNING: Overtightening of clamps may cause damage or failure of housings.

Clamp Mounting Instructions

Part #	Hole Spacing
UCL - 40.2	5 1/2"
UCL - 40.3	5 1/4"
UCL - 40.9	5 1/8"

1) Drill two 3/8" dia holes in the mounting surface using spacing listed above. This spacing is from center to center of the holes and is very important in order to apply proper clamping pressure. Example: UCL - 40.2, 5 1/2" spacing

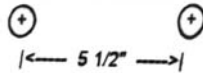


- 2) Place clamp over the housing, insert cushion spacer between the housing and mounting surface.
- 3) Install 3/8" dia bolts flatwashers and locking nuts.
- 4) Tighten enough to secure housing being careful not to over tighten.

WARNING: Overtightening of clamps may cause damage or failure of housings.

Clamp Mounting Instructions

Part #	Hole Spacing
UCL - 40.2	5 1/2"
UCL - 40.3	5 1/4"
UCL - 40.9	5 1/8"

1) Drill two 3/8" dia holes in the mounting surface using spacing listed above. This spacing is from center to center of the holes and is very important in order to apply proper clamping pressure. Example: UCL - 40.2, 5 1/2" spacing




- 2) Place clamp over the housing, insert cushion spacer between the housing and mounting surface.
- 3) Install 3/8" dia bolts flatwashers and locking nuts.
- 4) Tighten enough to secure housing being careful not to over tighten.

WARNING: Overtightening of clamps may cause damage or failure of housings.

Clamp Mounting Instructions

Part #	Hole Spacing
UCL - 40.2	5 1/2"
UCL - 40.3	5 1/4"
UCL - 40.9	5 1/8"

1) Drill two 3/8" dia holes in the mounting surface using spacing listed above. This spacing is from center to center of the holes and is very important in order to apply proper clamping pressure. Example: UCL - 40.2, 5 1/2" spacing




- 2) Place clamp over the housing, insert cushion spacer between the housing and mounting surface.
- 3) Install 3/8" dia bolts flatwashers and locking nuts.
- 4) Tighten enough to secure housing being careful not to over tighten.

WARNING: Overtightening of clamps may cause damage or failure of housings.

Clamp Mounting Instructions

Part #	Hole Spacing
UCL - 40.2	5 1/2"
UCL - 40.3	5 1/4"
UCL - 40.9	5 1/8"

1) Drill two 3/8" dia holes in the mounting surface using spacing listed above. This spacing is from center to center of the holes and is very important in order to apply proper clamping pressure. Example: UCL - 40.2, 5 1/2" spacing




- 2) Place clamp over the housing, insert cushion spacer between the housing and mounting surface.
- 3) Install 3/8" dia bolts flatwashers and locking nuts.
- 4) Tighten enough to secure housing being careful not to over tighten.

WARNING: Overtightening of clamps may cause damage or failure of housings.

Clamp Mounting Instructions

Part #	Hole Spacing
UCL - 40.2	5 1/2"
UCL - 40.3	5 1/4"
UCL - 40.9	5 1/8"

1) Drill two 3/8" dia holes in the mounting surface using spacing listed above. This spacing is from center to center of the holes and is very important in order to apply proper clamping pressure. Example: UCL - 40.2, 5 1/2" spacing



- 2) Place clamp over the housing, insert cushion spacer between the housing and mounting surface.
- 3) Install 3/8" dia bolts flatwashers and locking nuts.
- 4) Tighten enough to secure housing being careful not to over tighten.

WARNING: Overtightening of clamps may cause damage or failure of housings.